

1/23



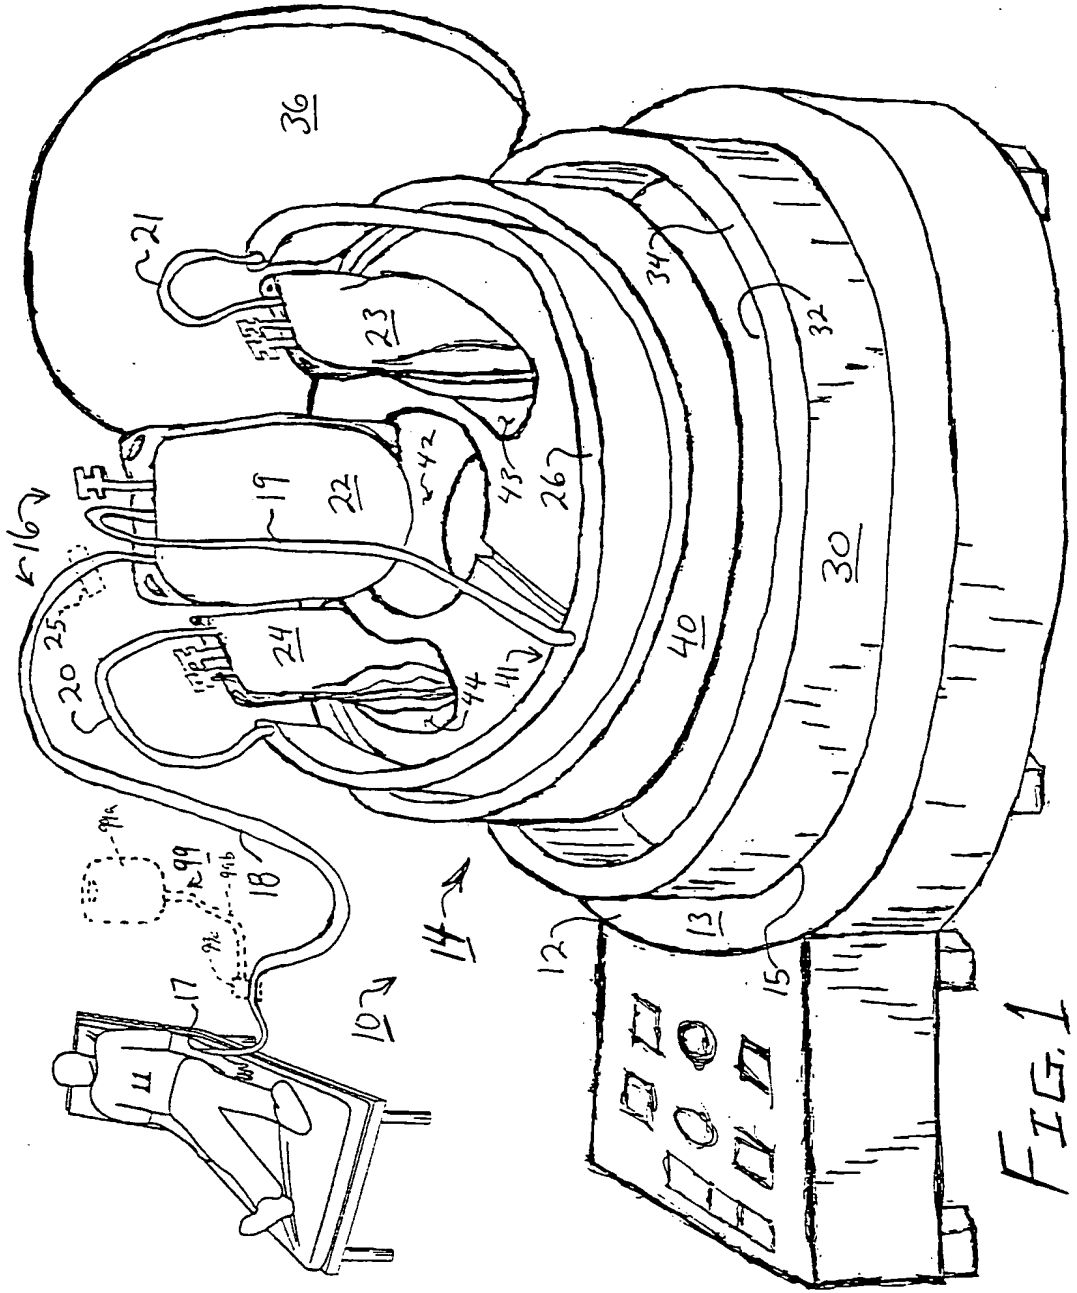


FIG. 1

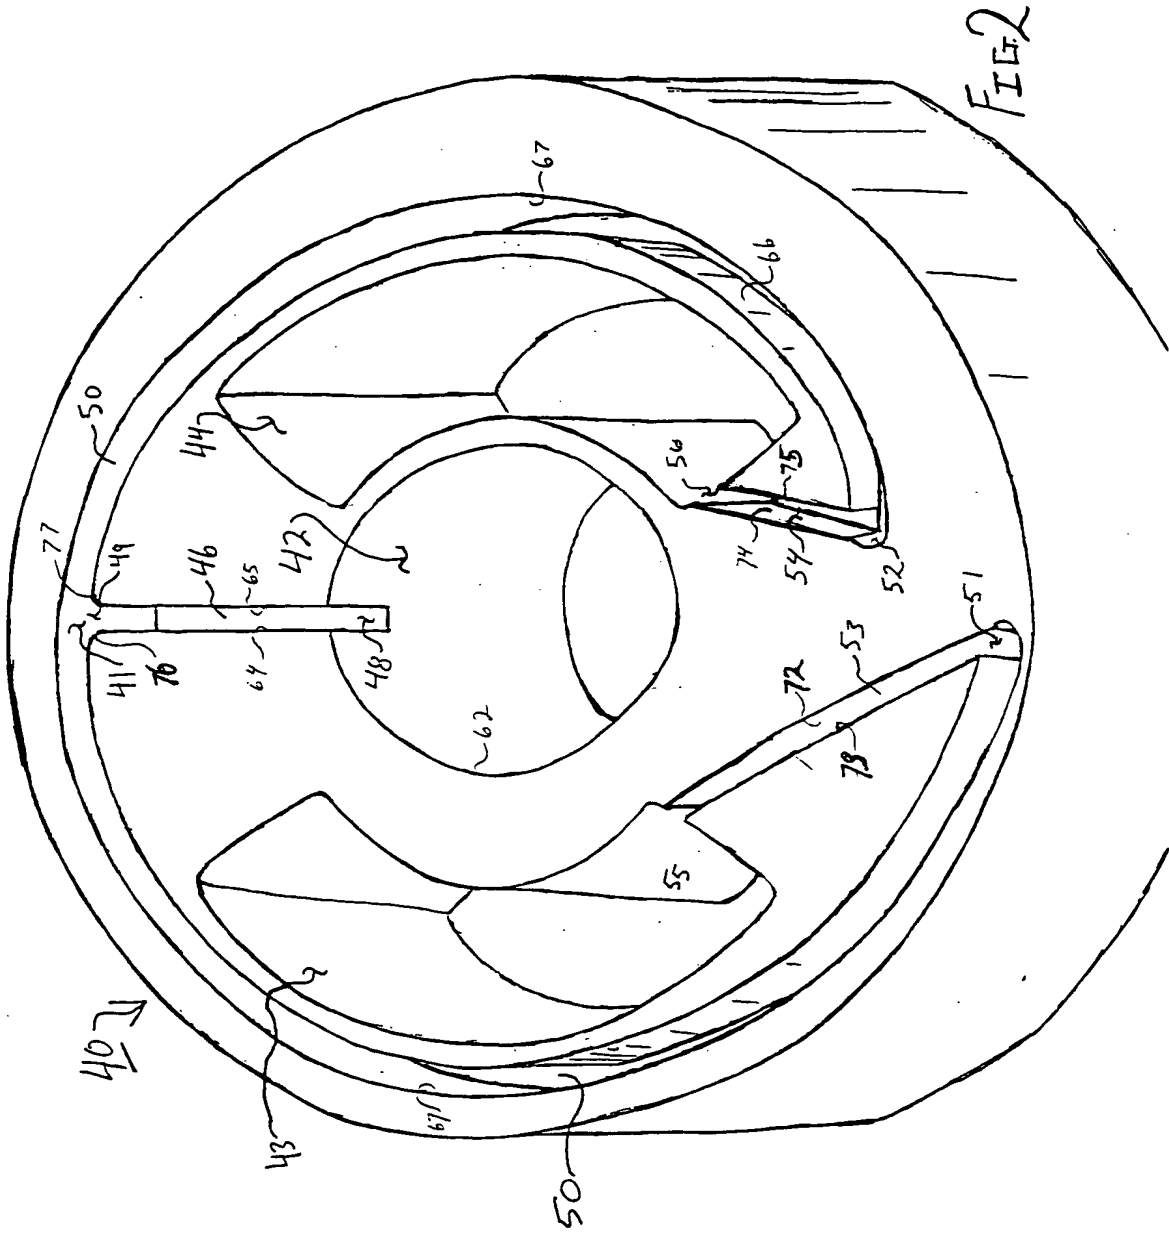

3/23

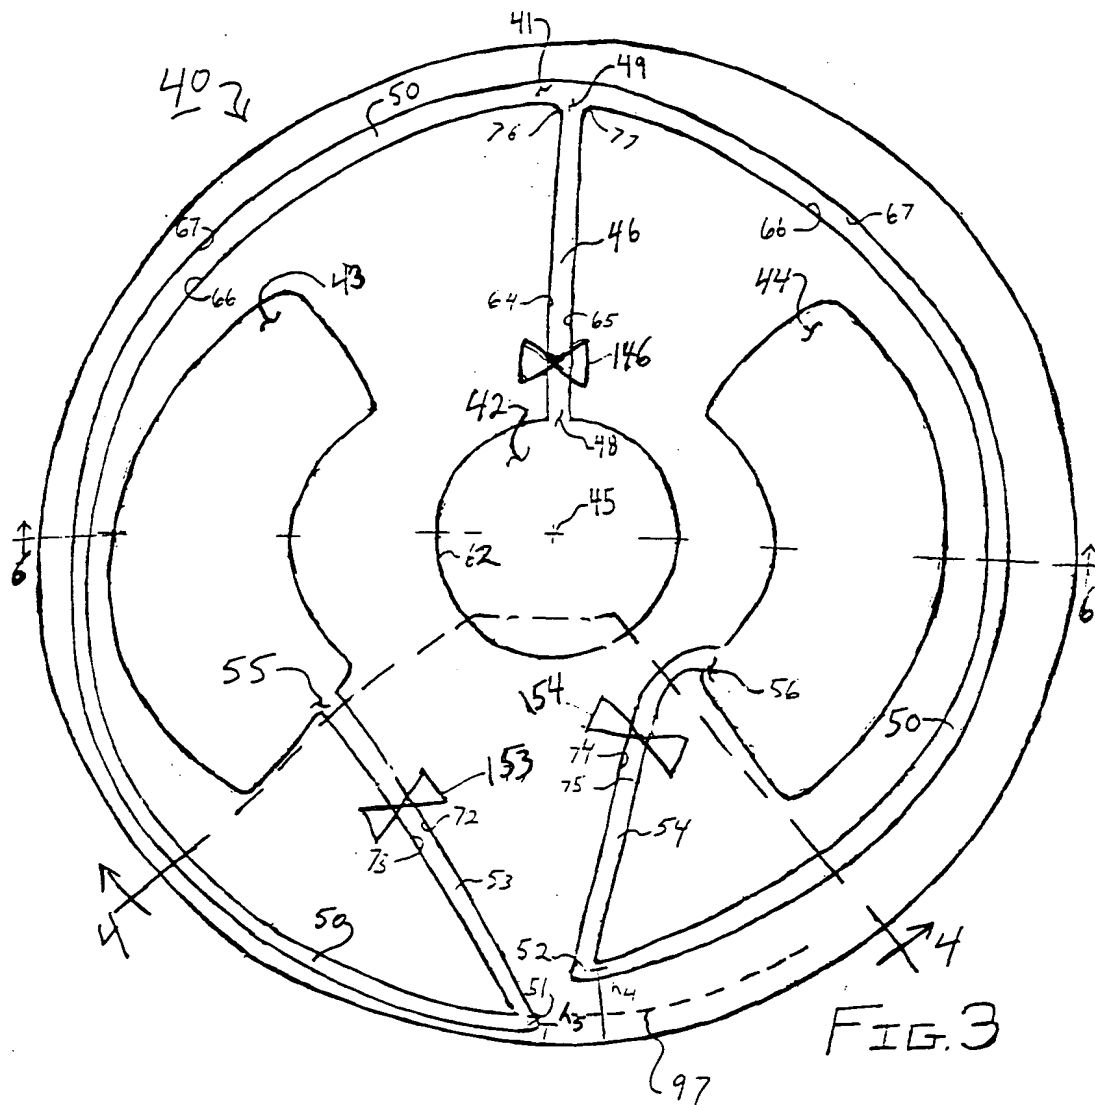

4/23

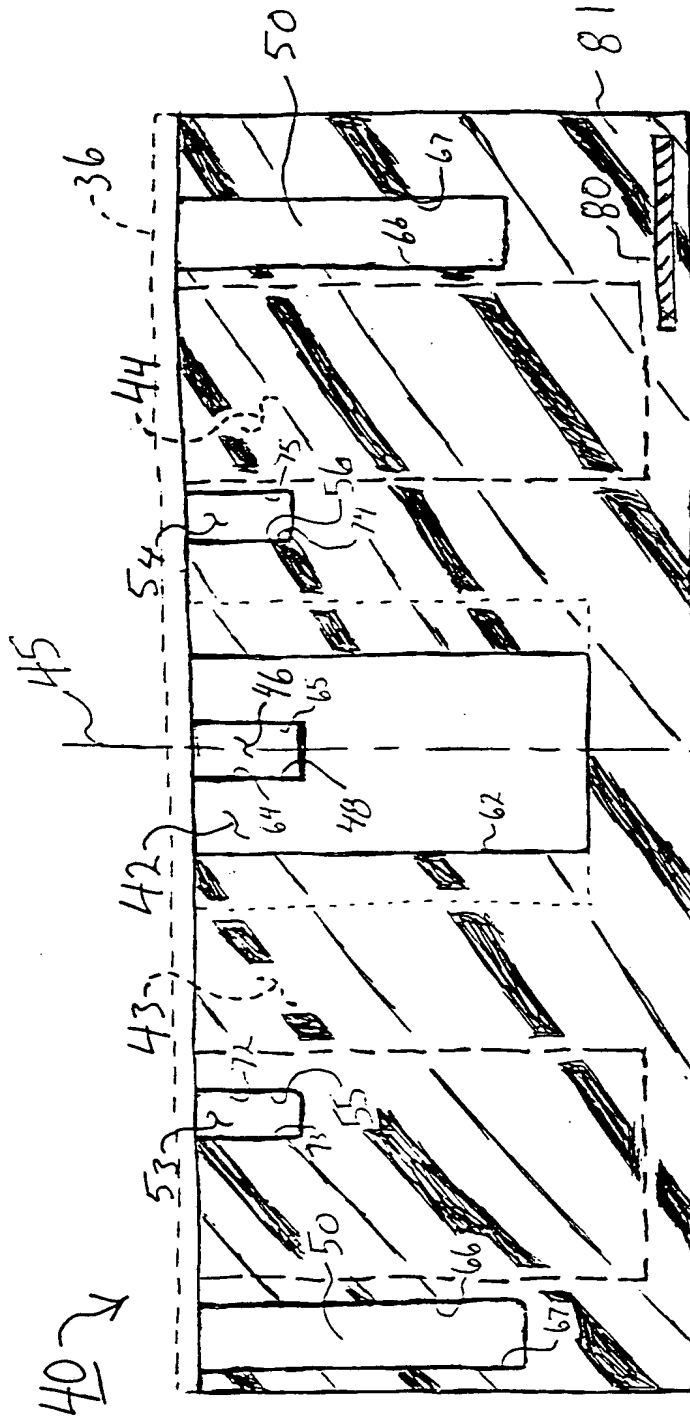


FIG. 4

5/23




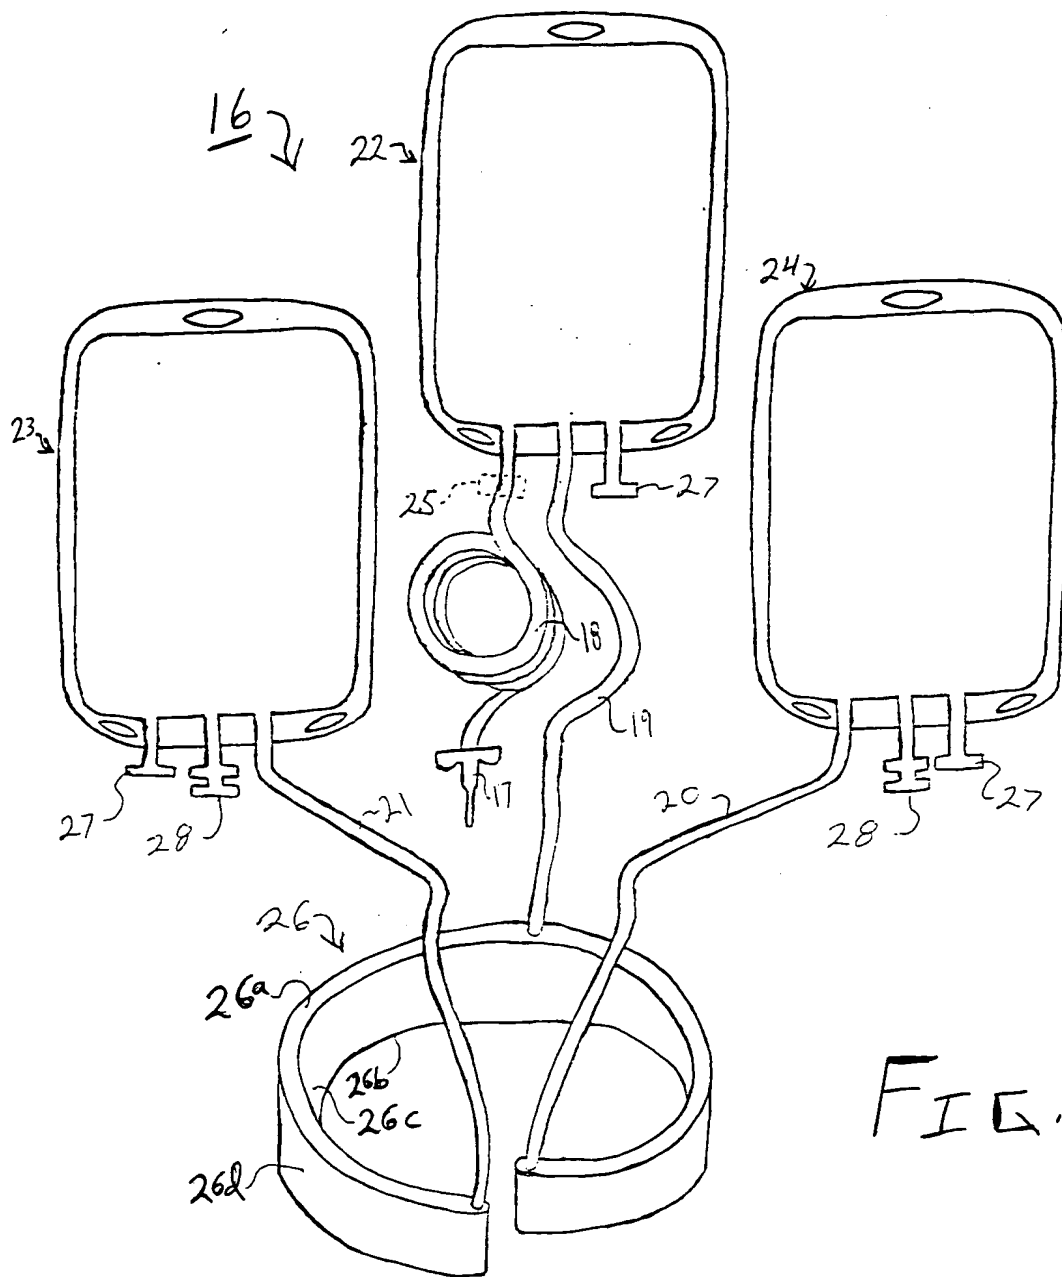



FIG. 5

6/23

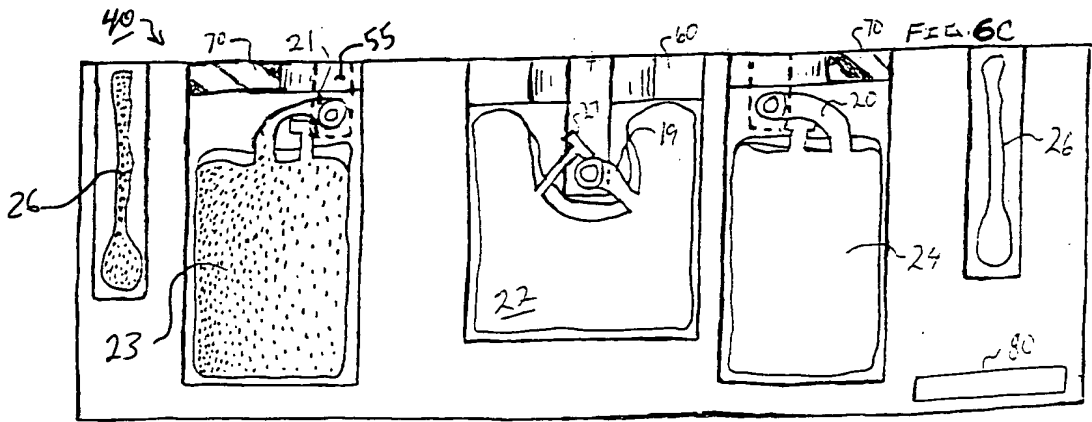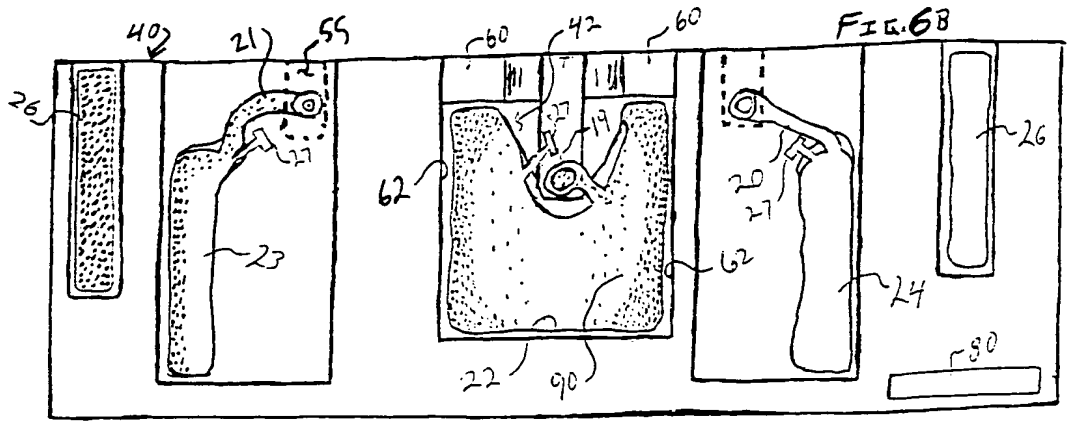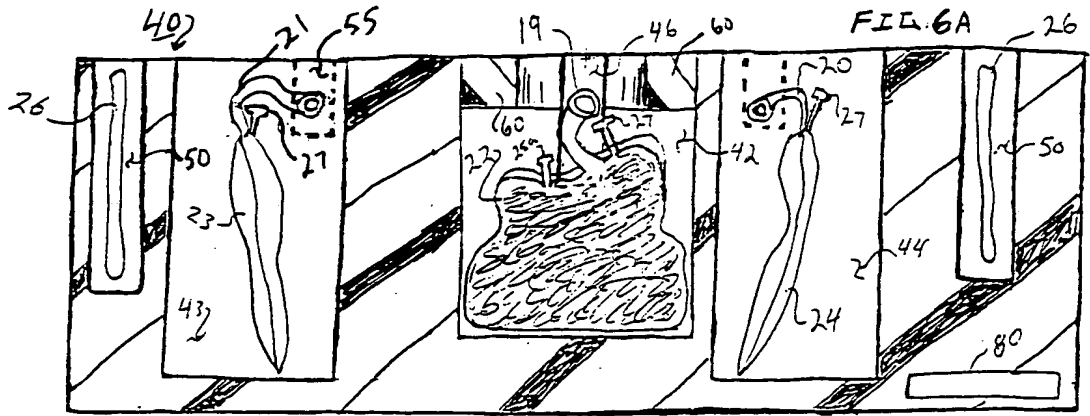


10005431-110201

7/23

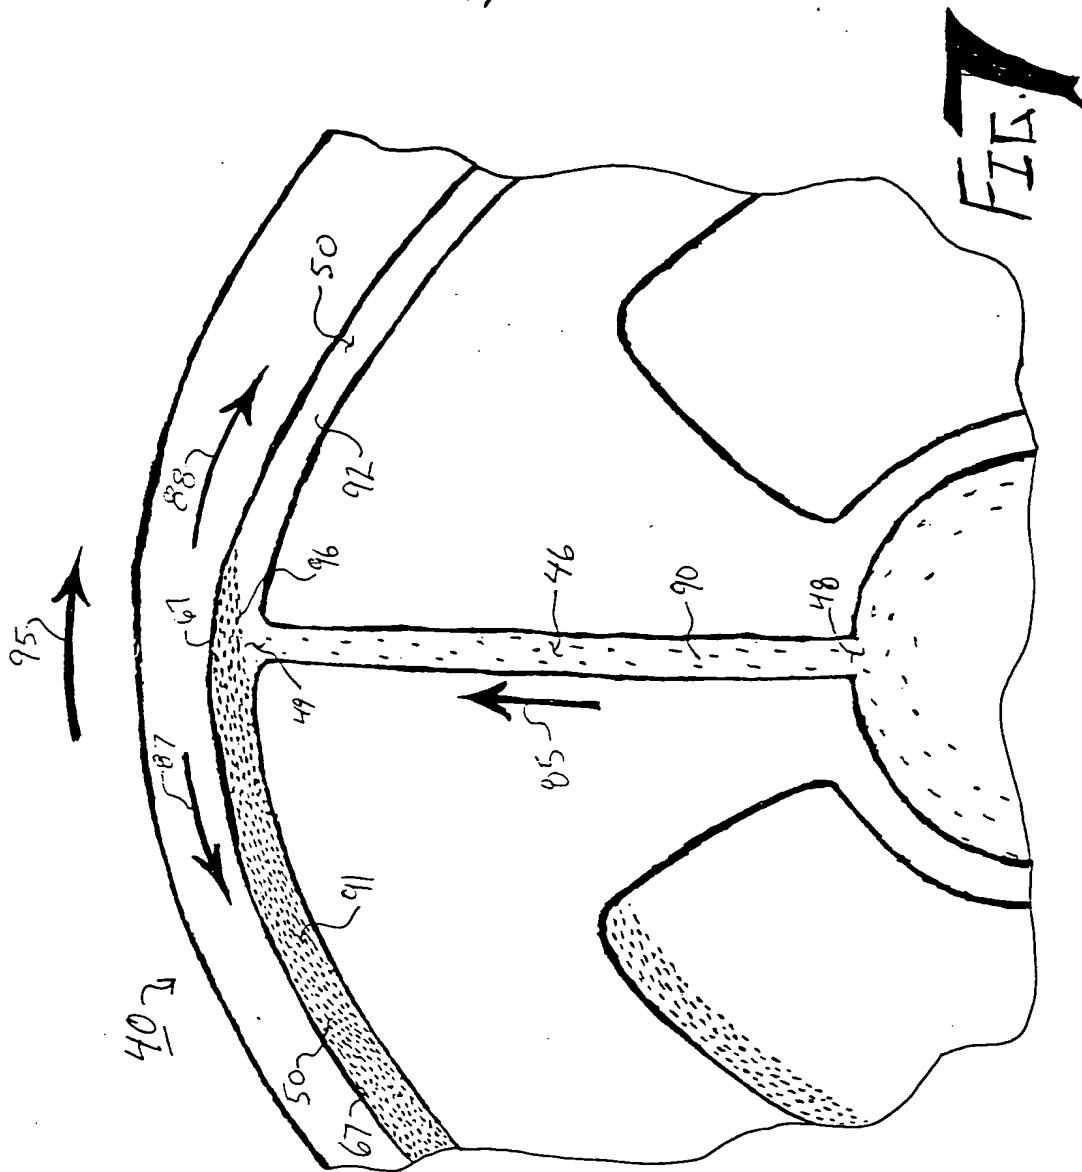

8/23

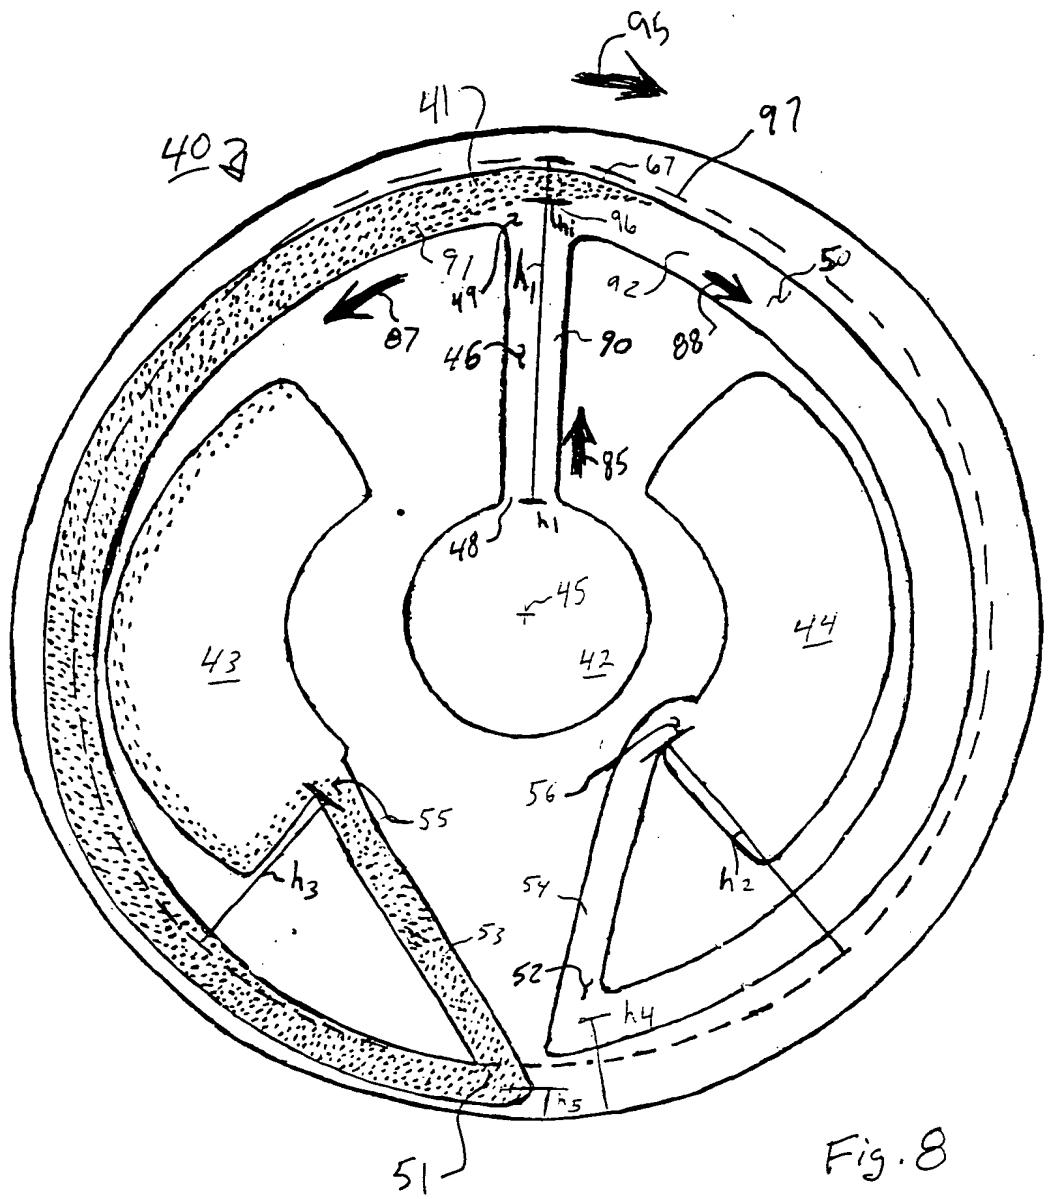

9/23


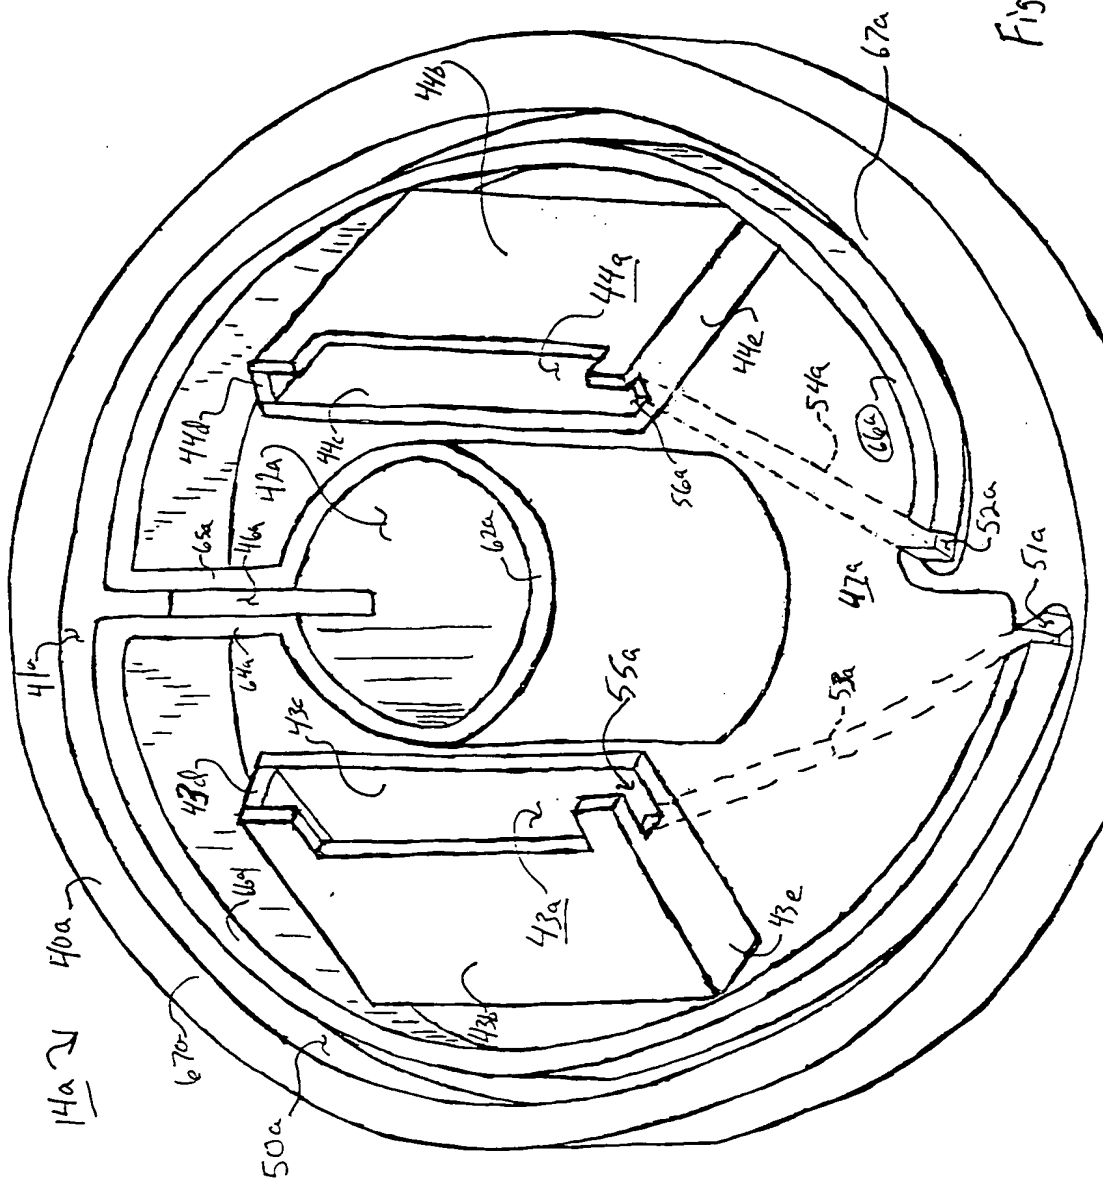


Fig. 9

10/23

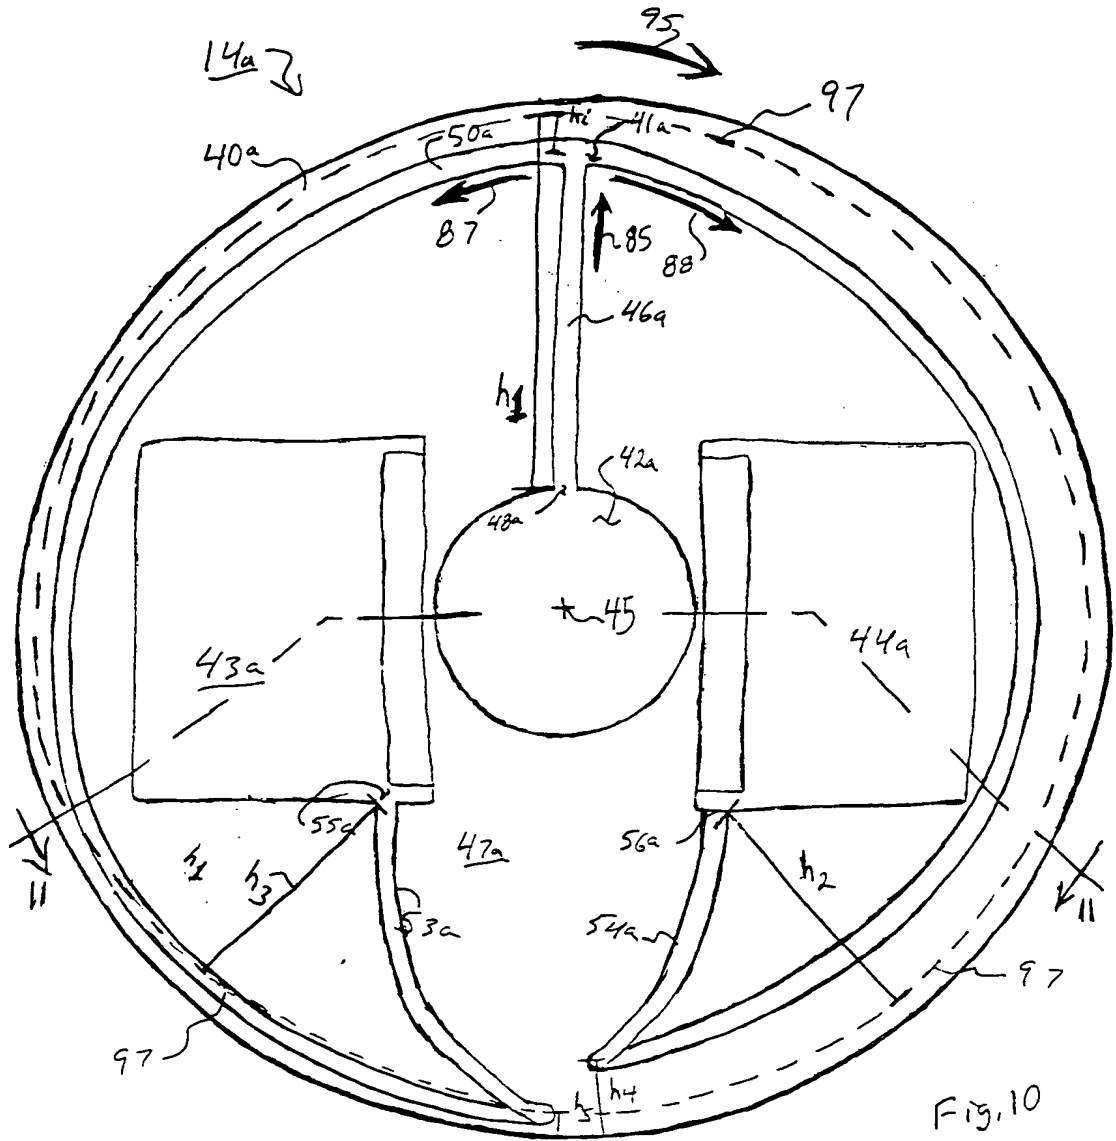

FOOTPRINT TECHNOLOGY

11/23

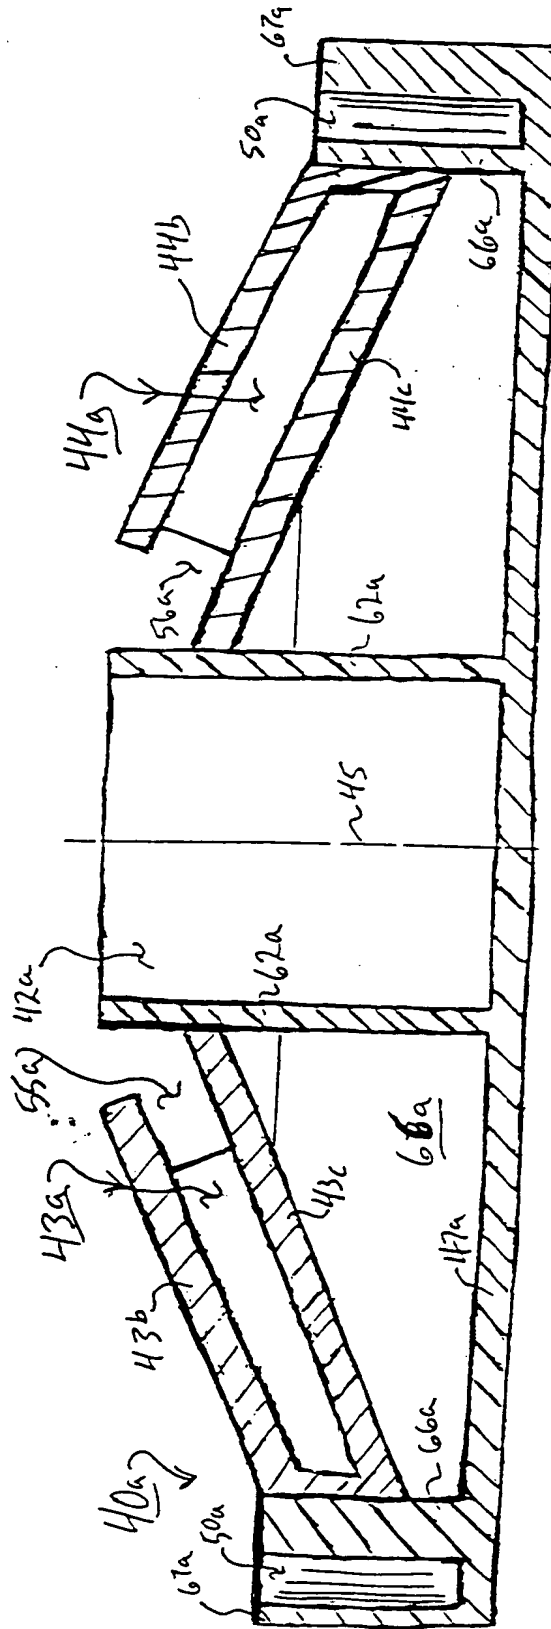


Fig. 11A



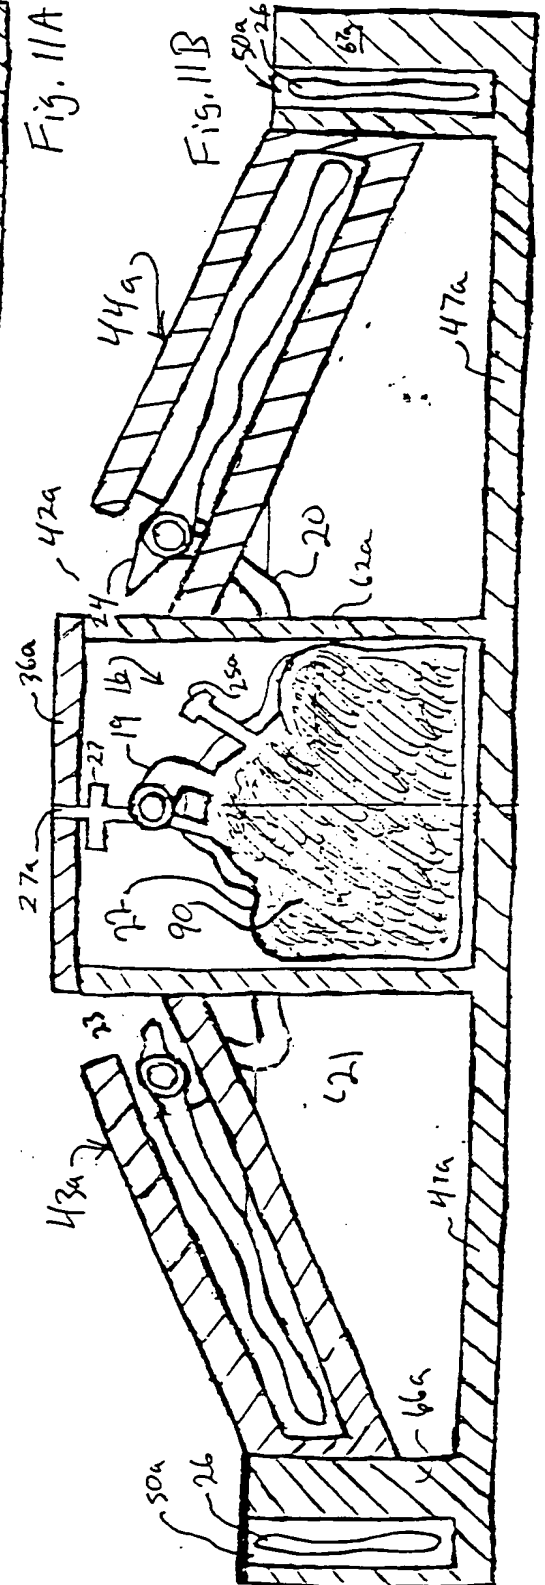


Fig. 11B

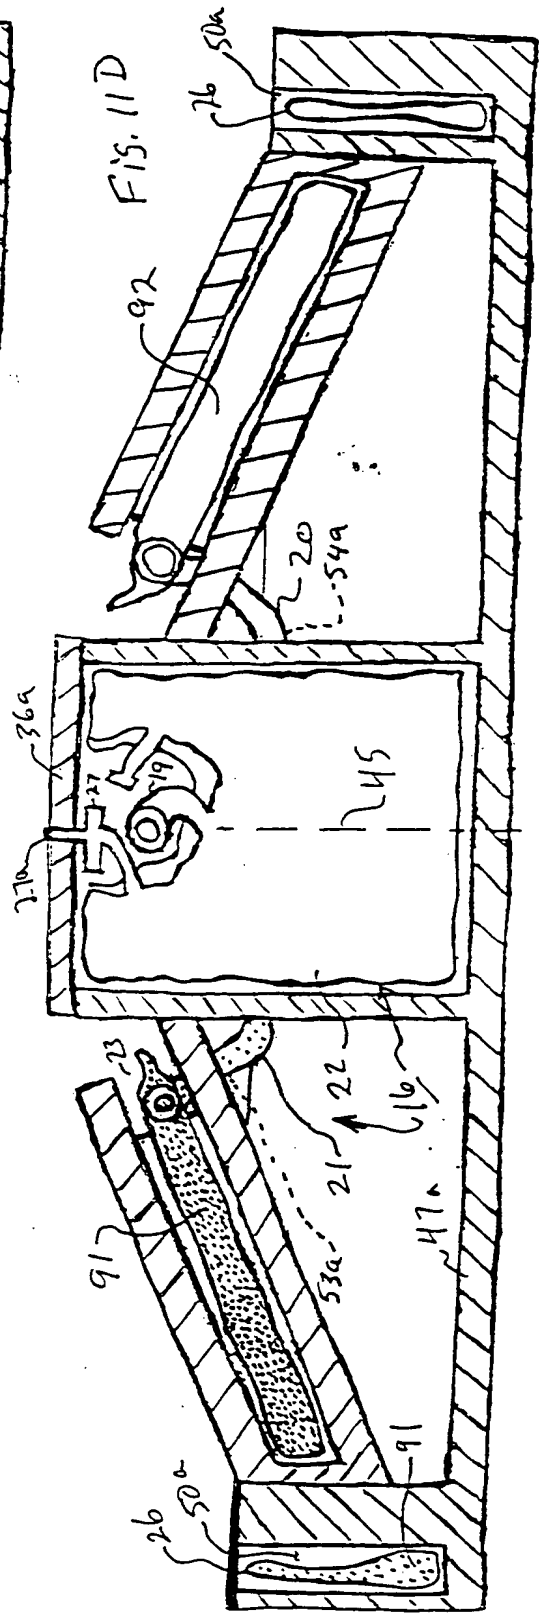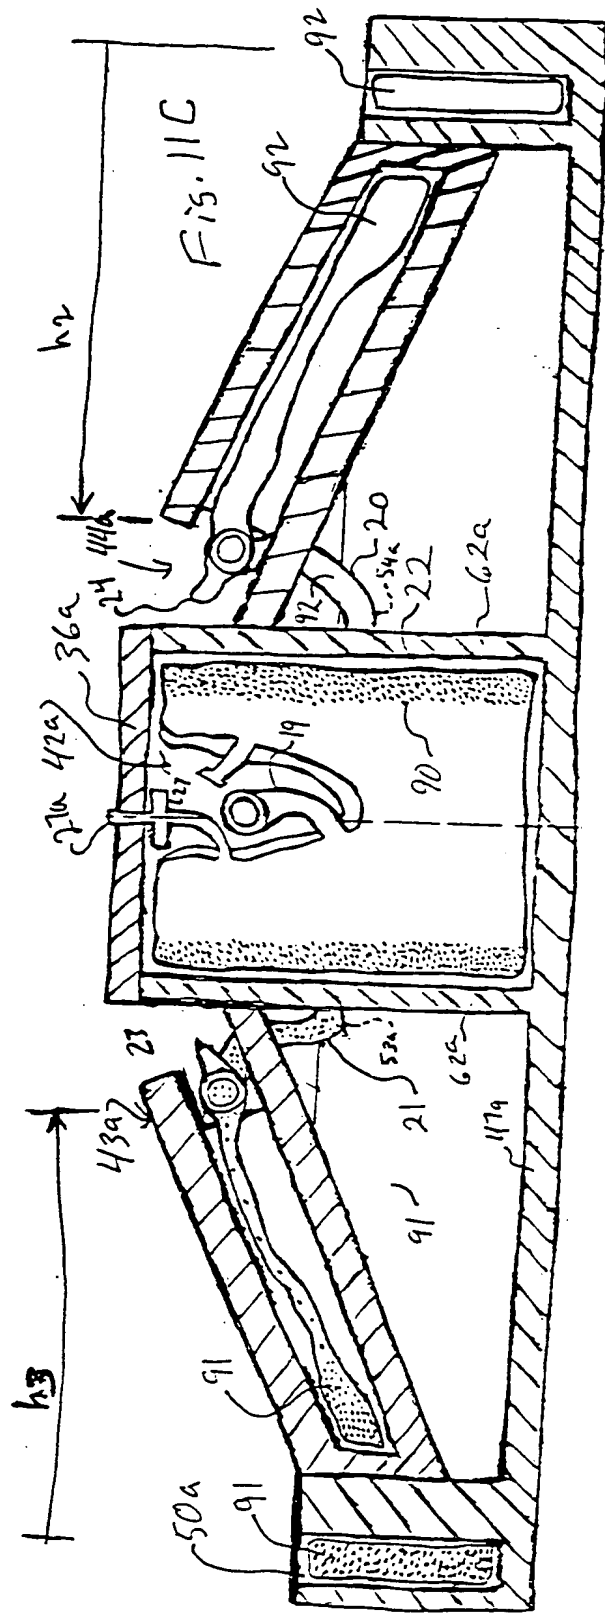

13/23

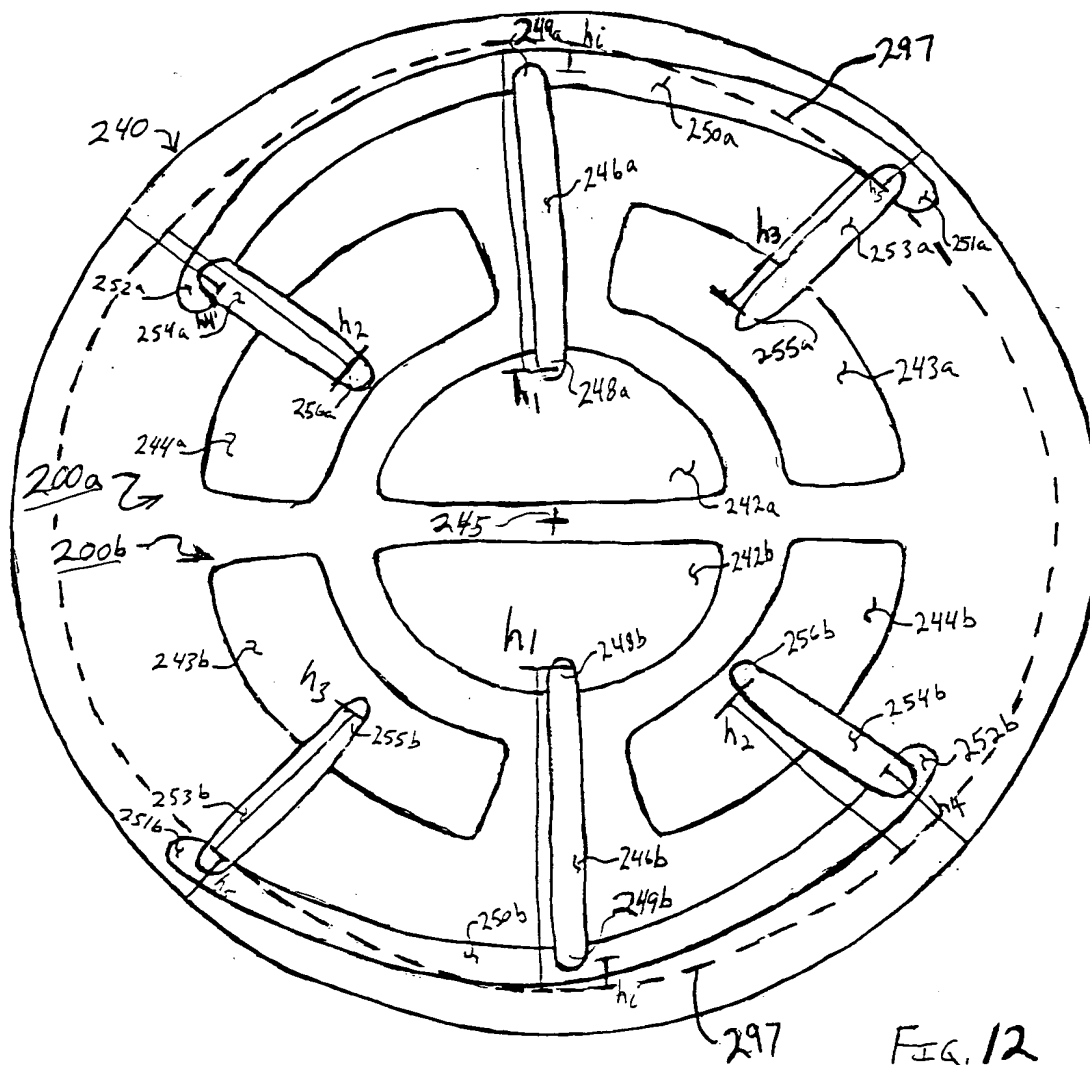


FIG. 12

1000441 1000441 1000441

Index

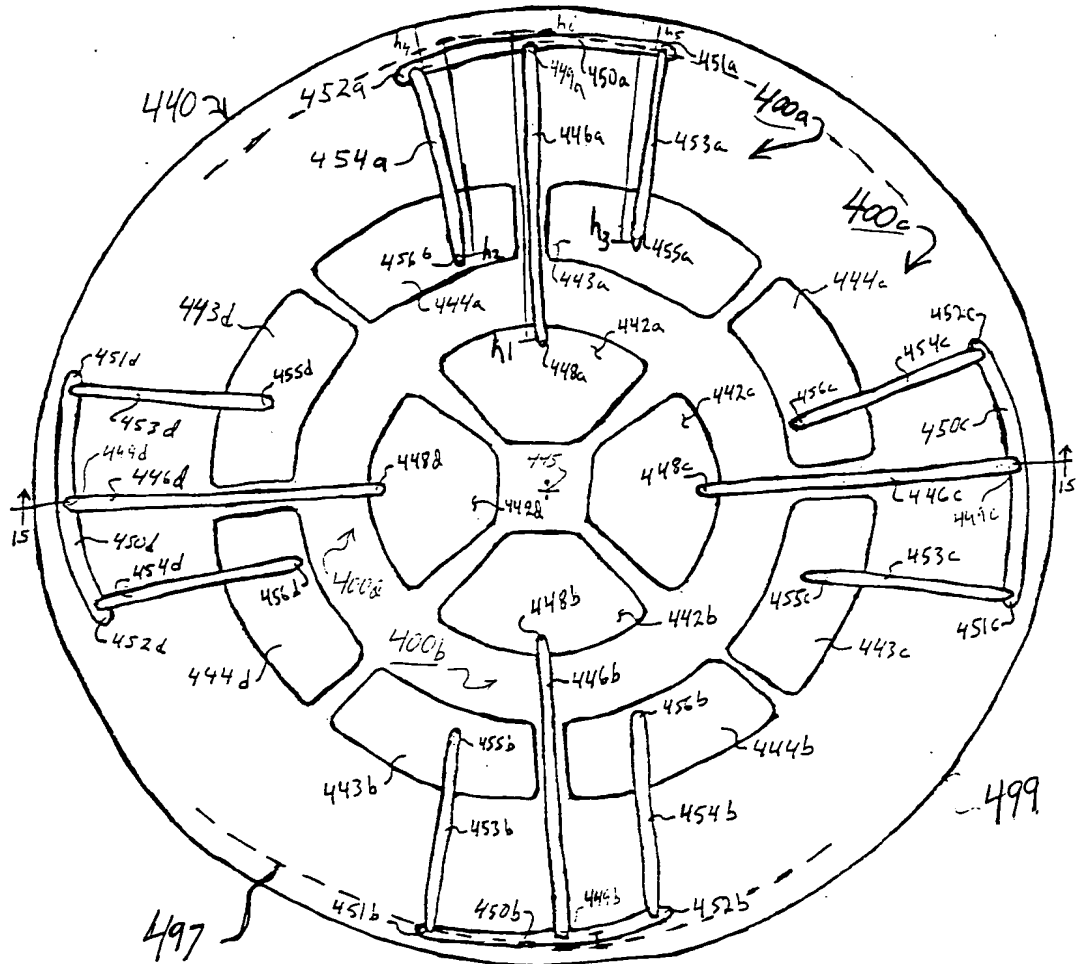


Fig. 13

15/23

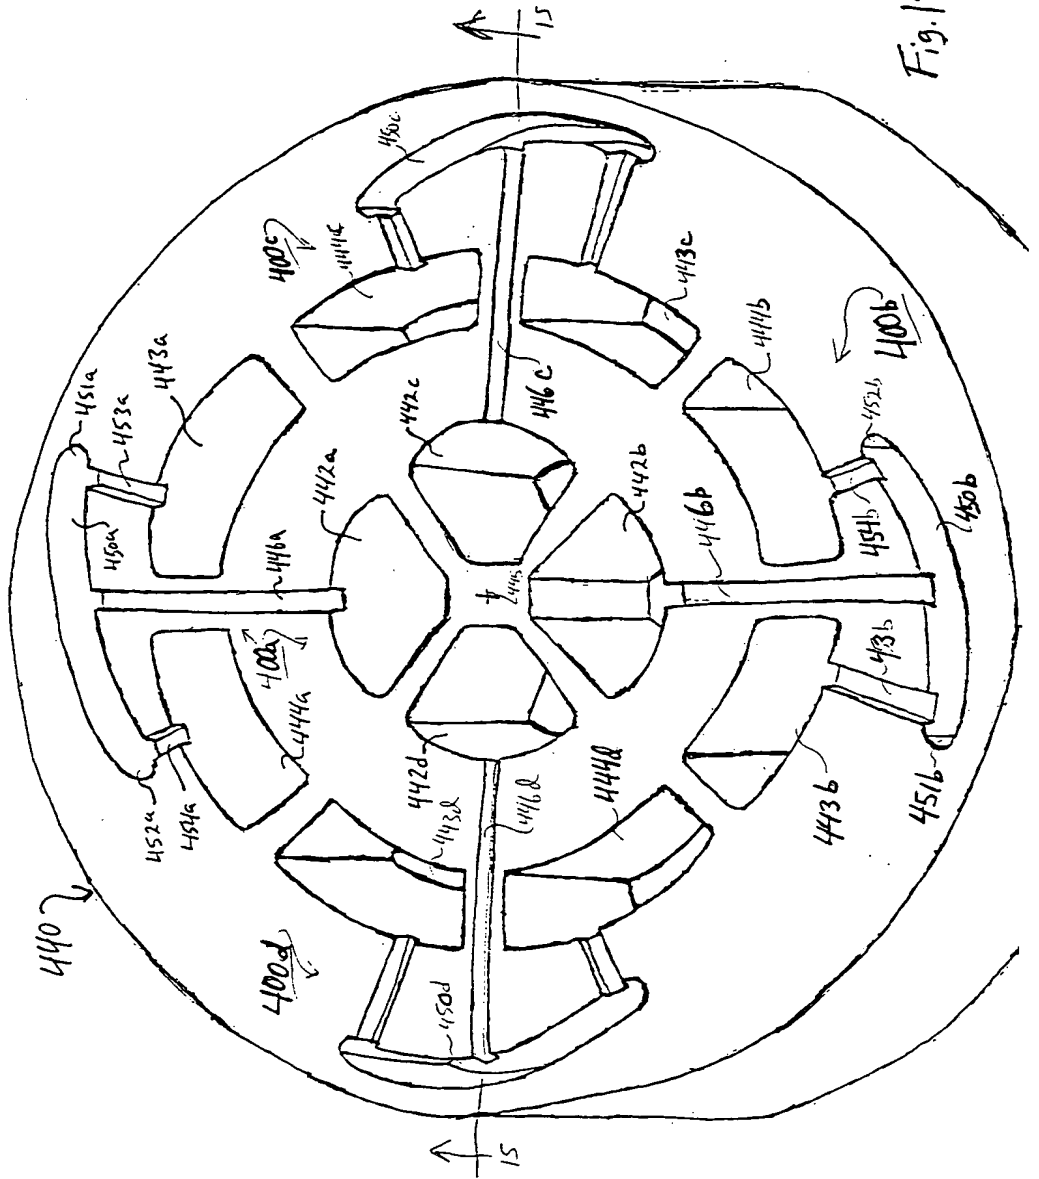


Fig. 14

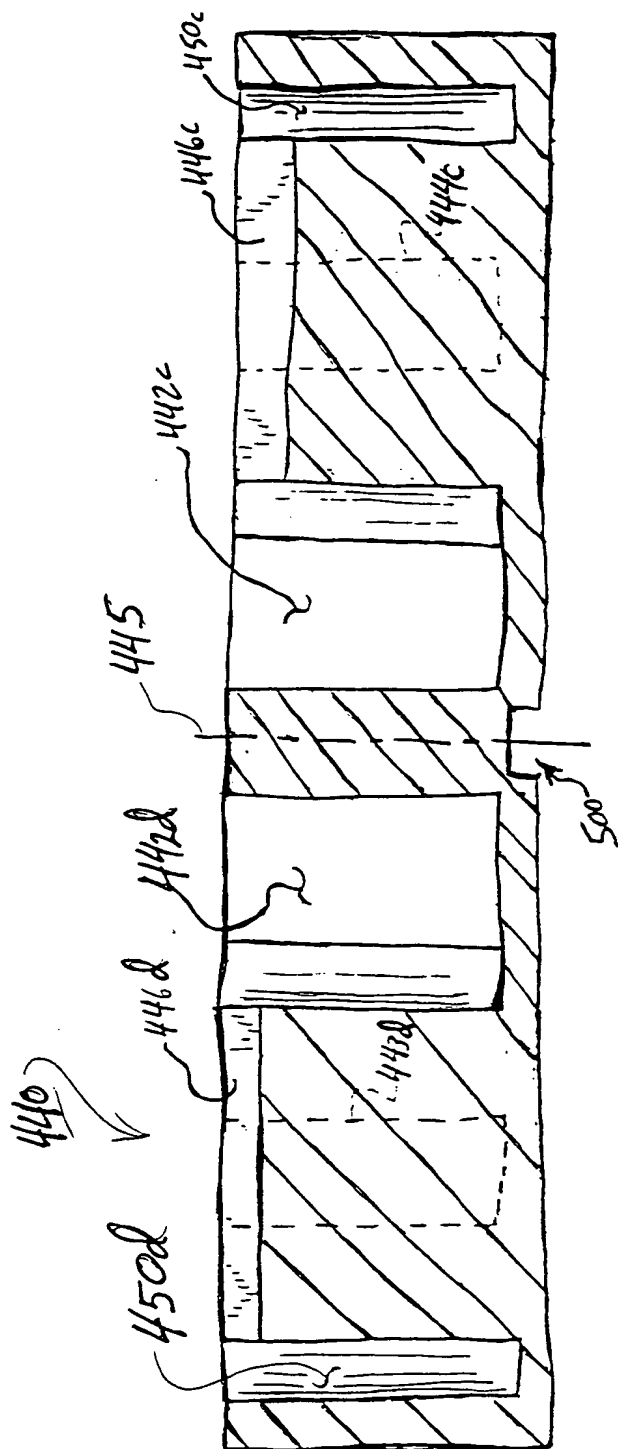


Fig. 15

17/23


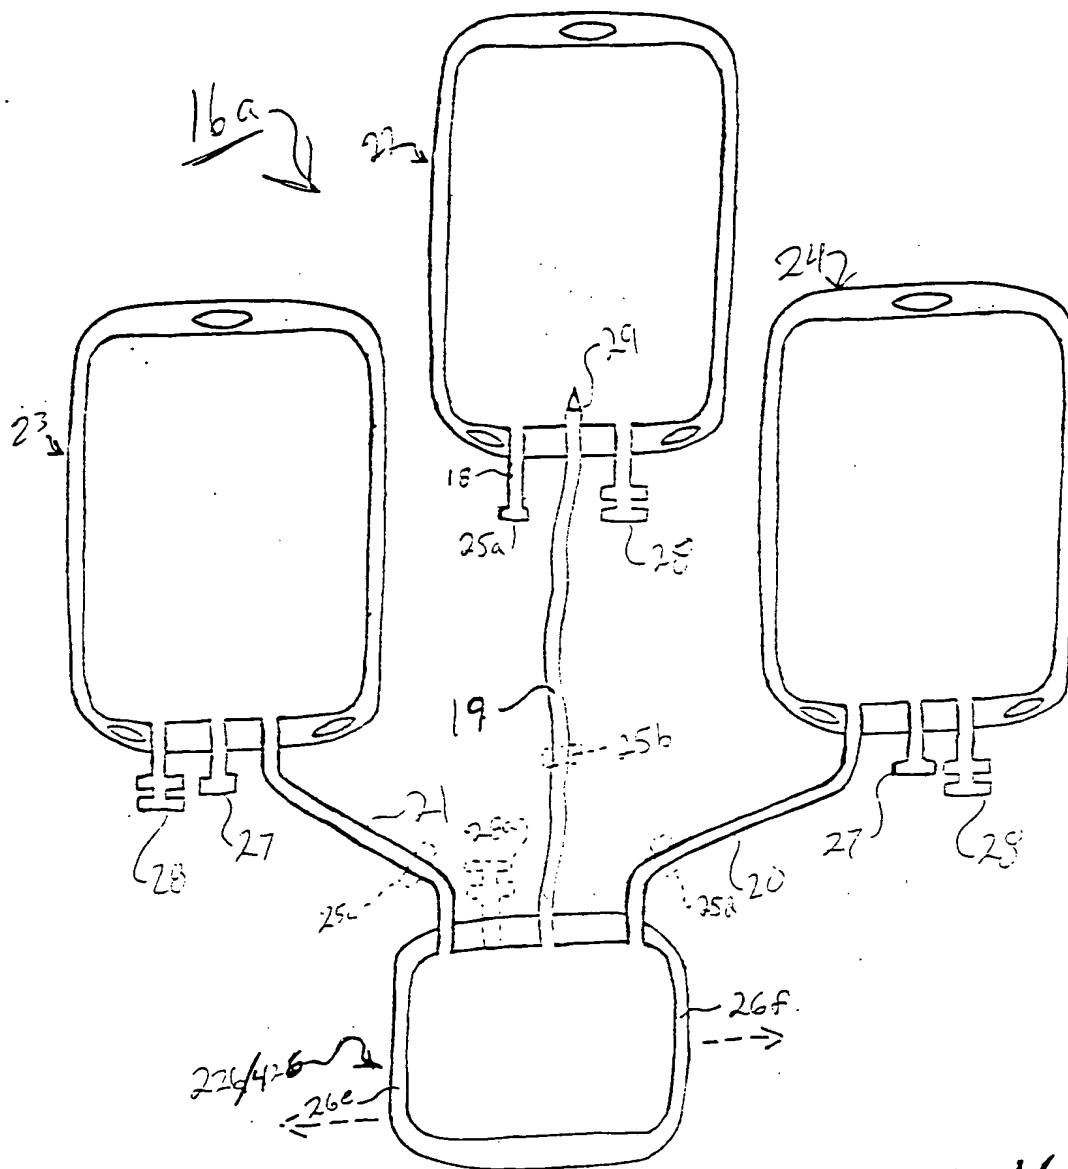


Fig. 16

18/23

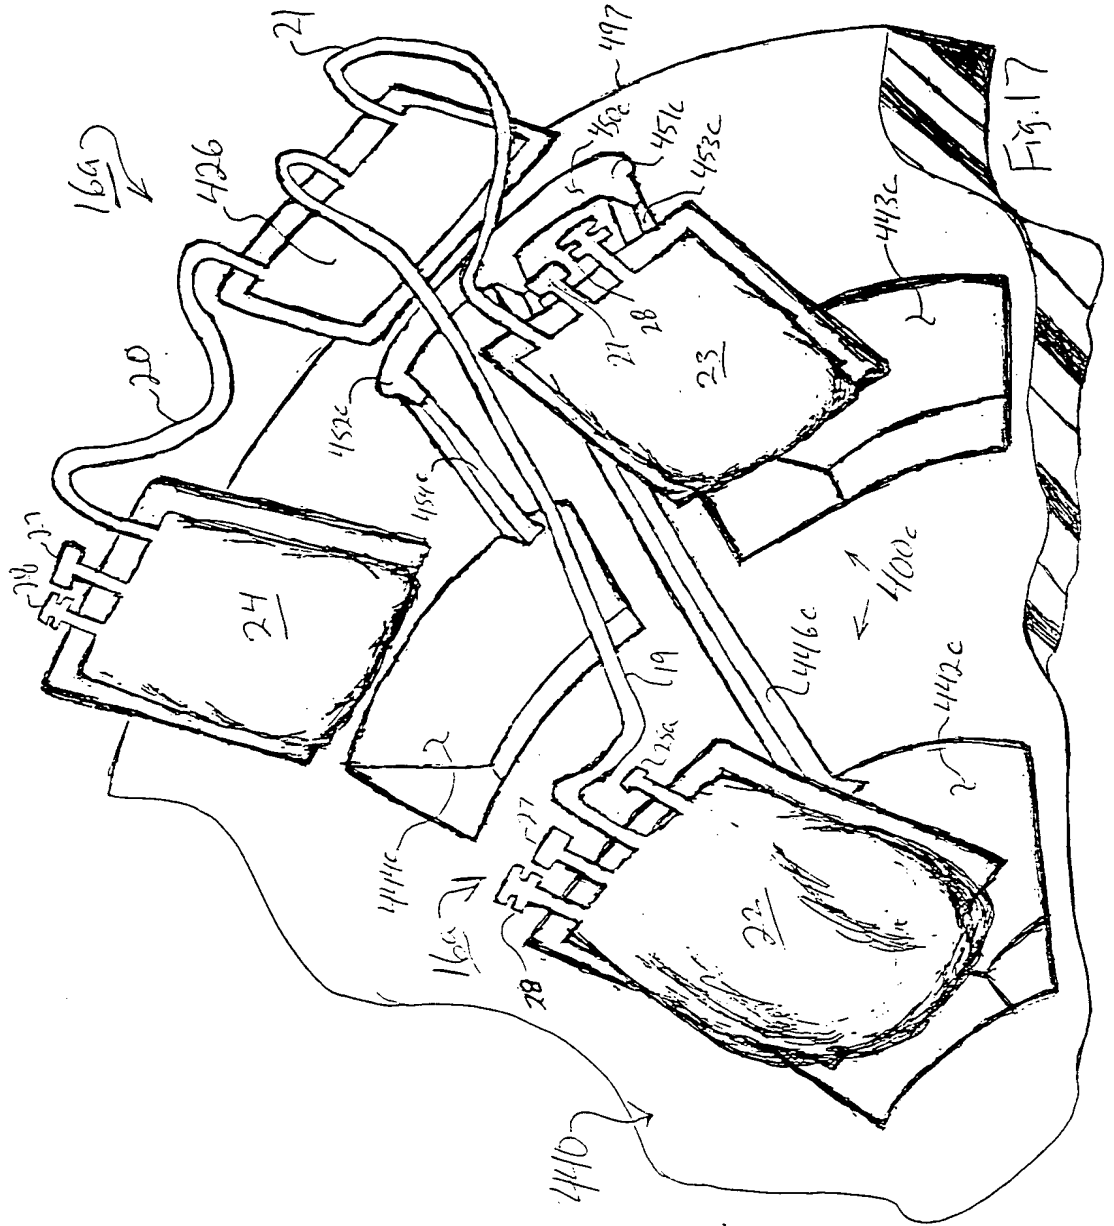

19/23

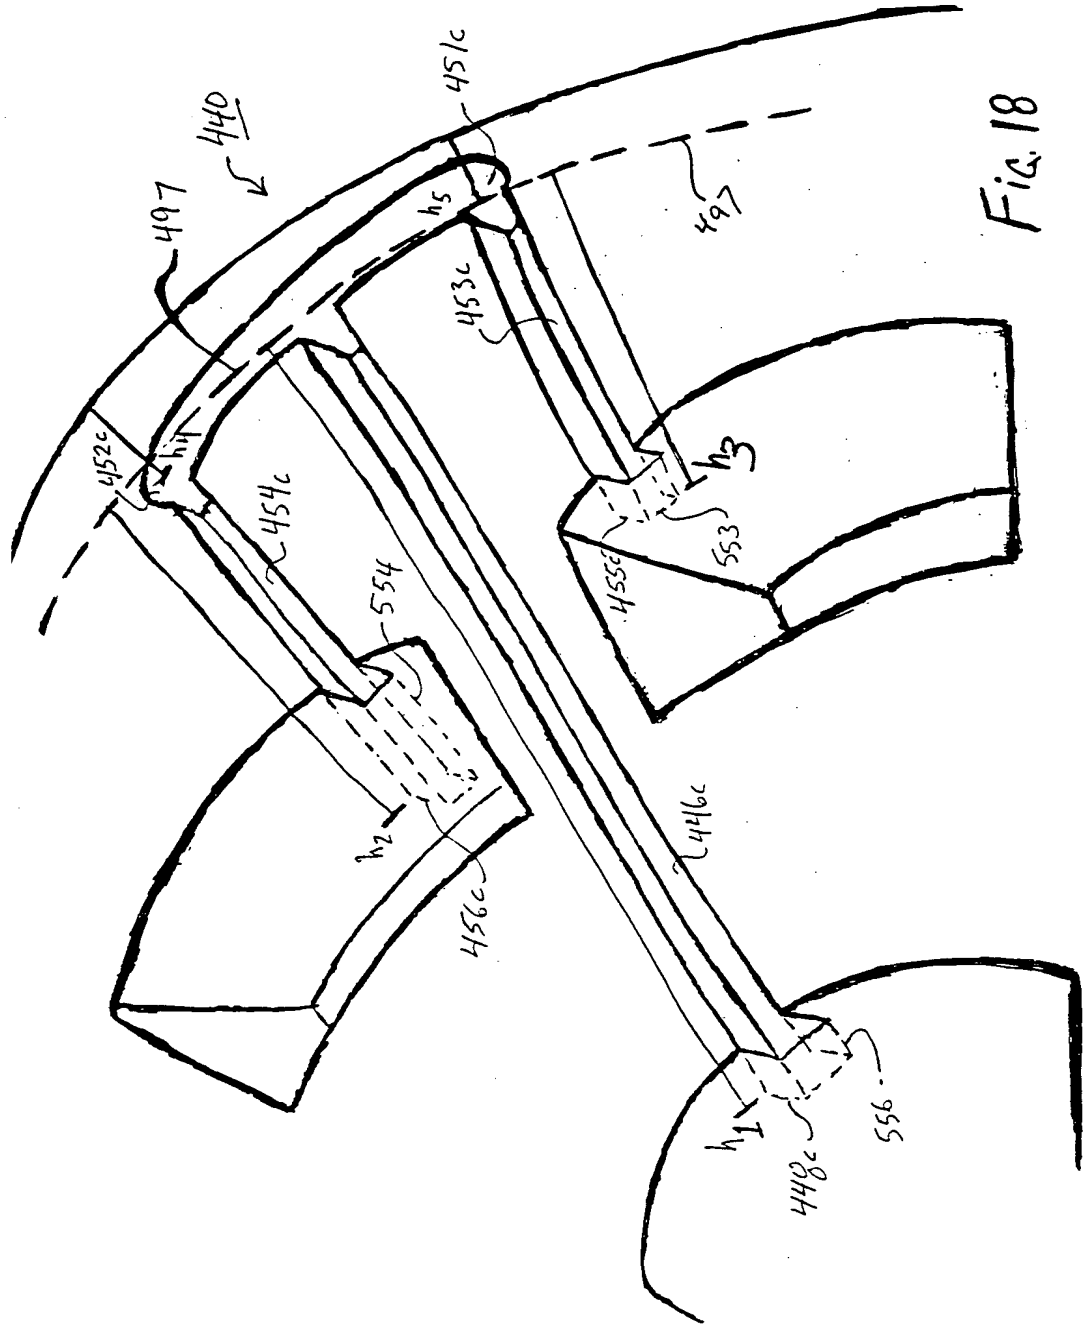



Fig. 18

10005431.10201

20/23

Load Set


①

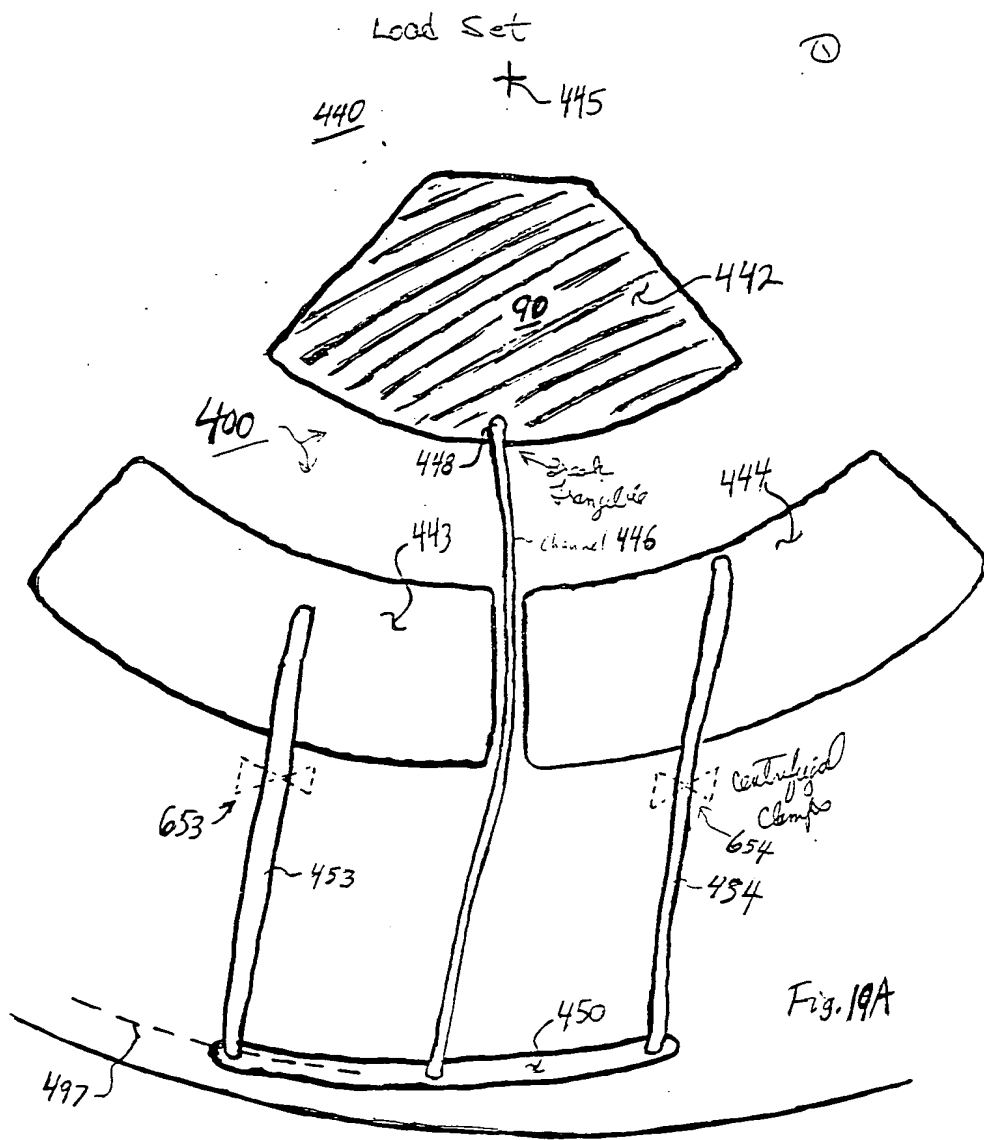

21/23


Transition to High RPM

445

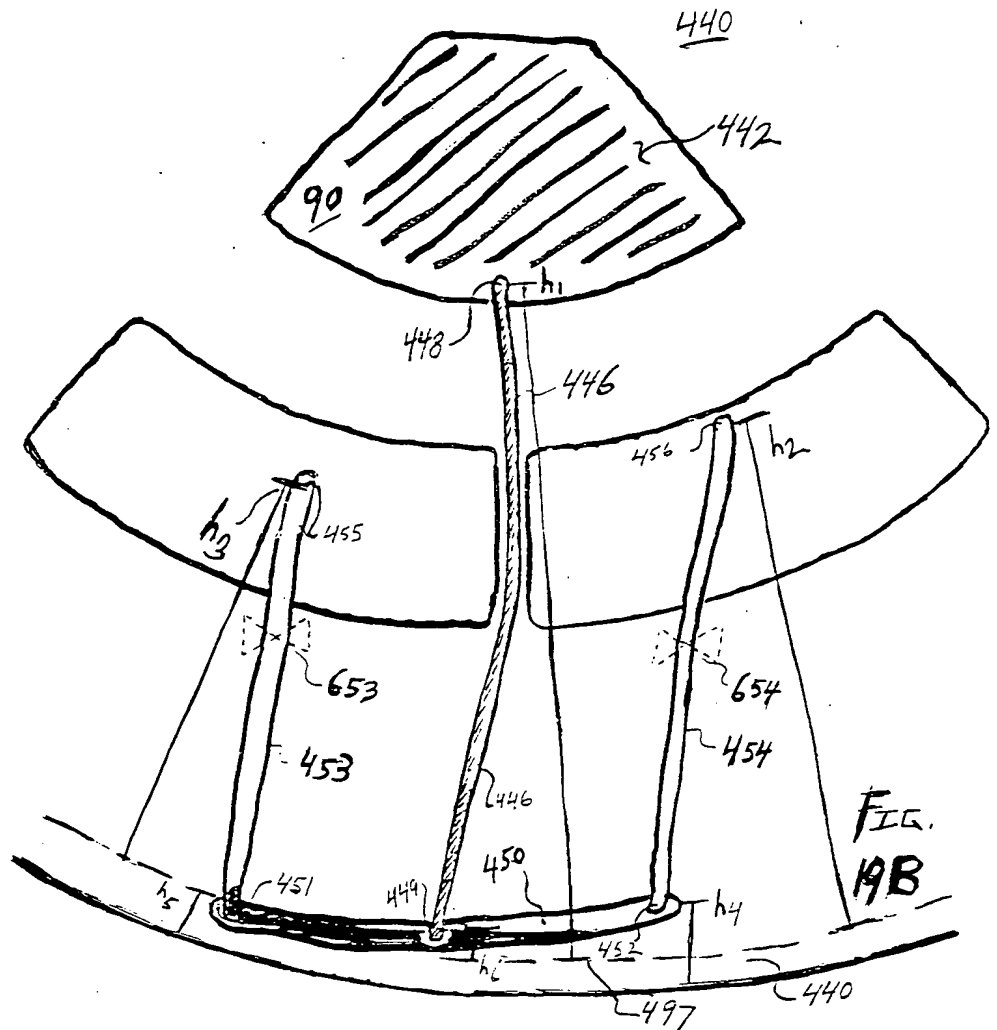

10005431.110201

Centrifugal Clamps Open

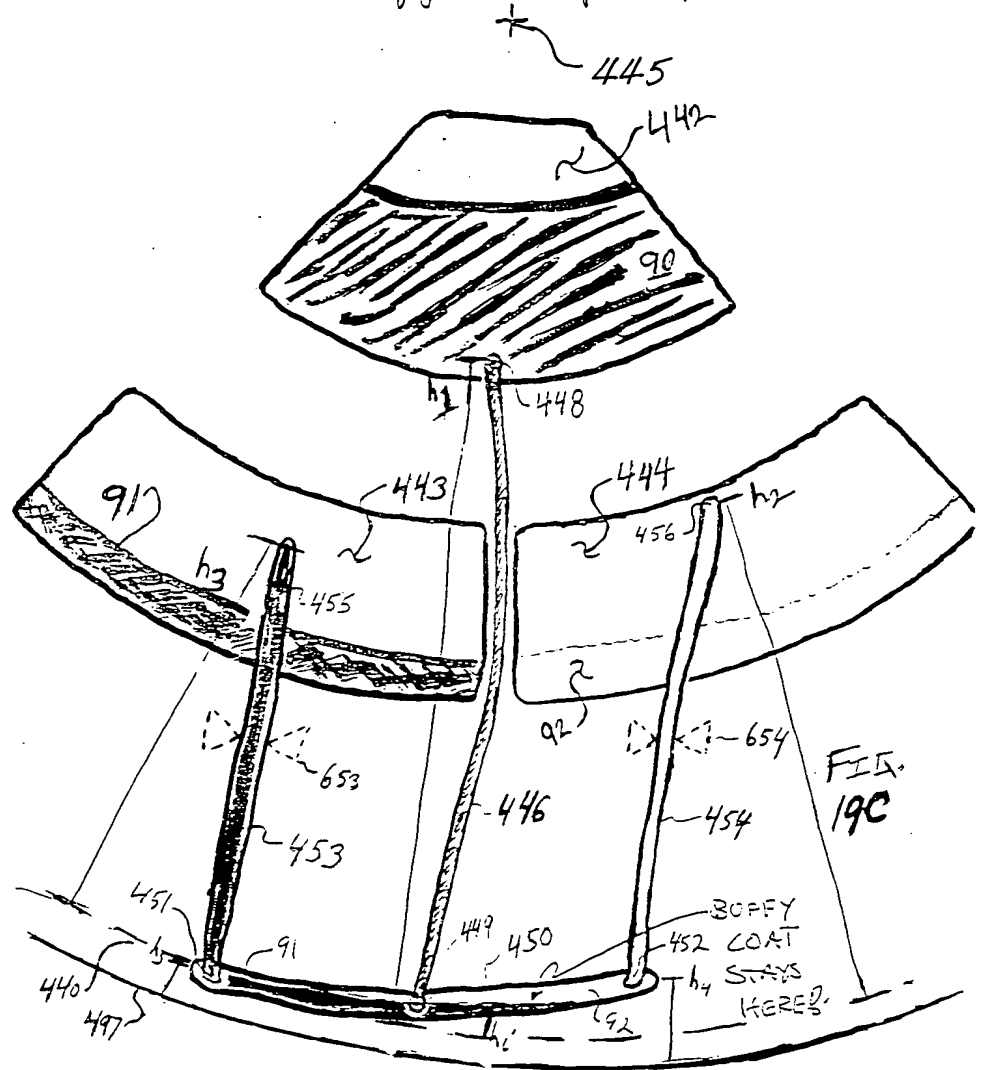

23/23

